

All dreamGEAR Sound products come with a limited warranty and have been subjected to a thorough series of tests to ensure the highest level of dependability and consistency. It is unlikely that you will experience any problem, but if a defect should become apparent during the use of this product, dreamGEAR warrants to the original consumer purchaser that this product will be free from defects in material and workmanship for a period of 120 days from the date of your original purchase. If a defect covered by this warranty occurs, dreamGEAR, at its option, will repair or replace the product purchased at no charge. If a replacement is necessary and your product is no longer available, a comparable product may be substituted at the sole discretion of dreamGEAR.

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship. This warranty does not apply to products used for any industrial, professional or commercial purposes.

For service on any defective product under the 120-day warranty policy, please contact Customer Support to obtain a Return Authorization Number.

NOTE: dreamGEAR will not process any defective claims without a Return Authorization Number.

Customer Support Hotline:
877-899-DREAM (Toll Free in the U.S. and Canada only) or
310-222-1045 (International)

Consumer Support Email: support@dreamgear.net


Websites:
www.dreamgear.net
www.isound.net

Quick Start Guide
Guía de inicio rápido
ISOUND-1669


Table of Contents

Quick Start	3
Contents	4
Controls	4
Consumer Guide	6
Product Features	7
Setting Clock Time	8
Install Backup Clock Battery	8
Listening to your iPhone/iPod	11
Listening via Auxiliary	11
Listening to Radio	12
Setting and Using Alarms	13
Sleep/Nap Operation	14
Remote Control	15

 
Quick Start

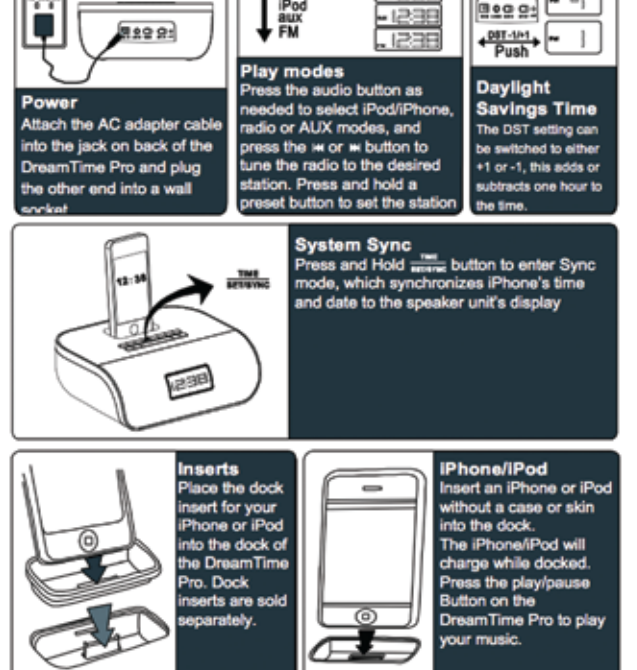


Controls

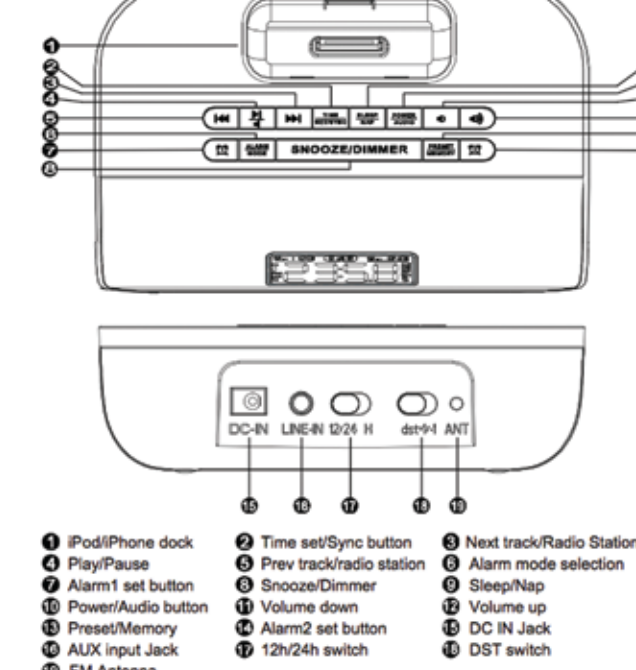 


LCD Display

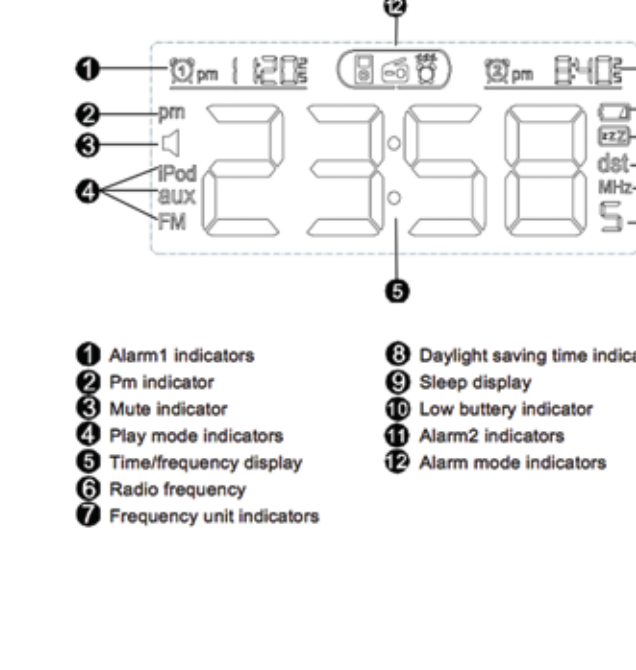 


Consumers Guide

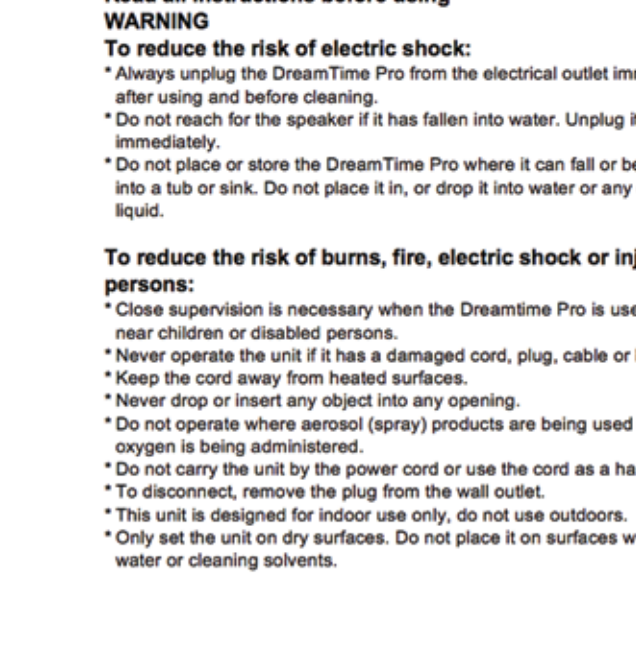 


Product Features

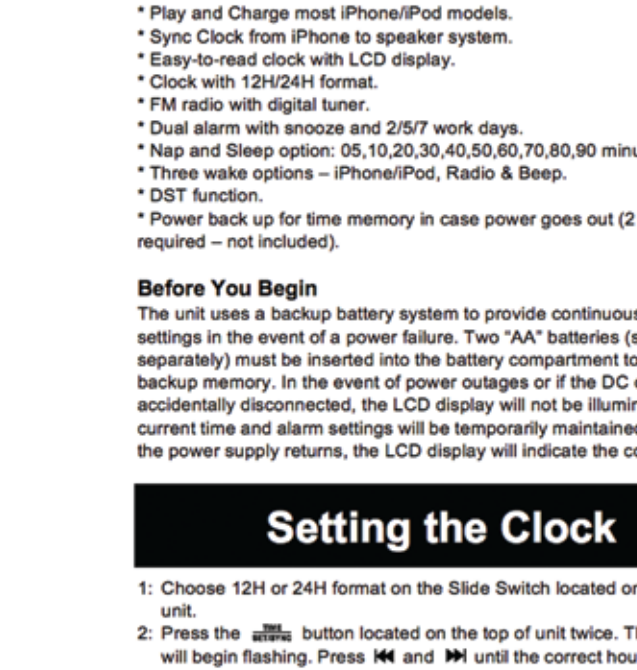 


Setting the Clock

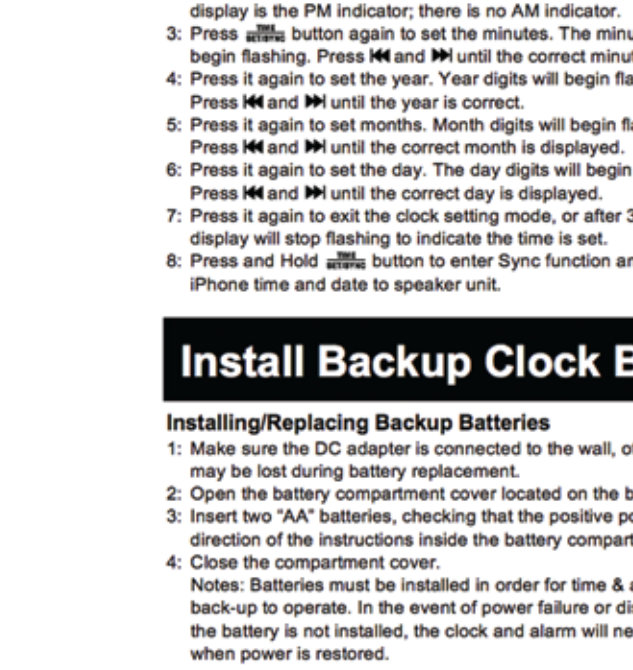 


Install Backup Clock Battery

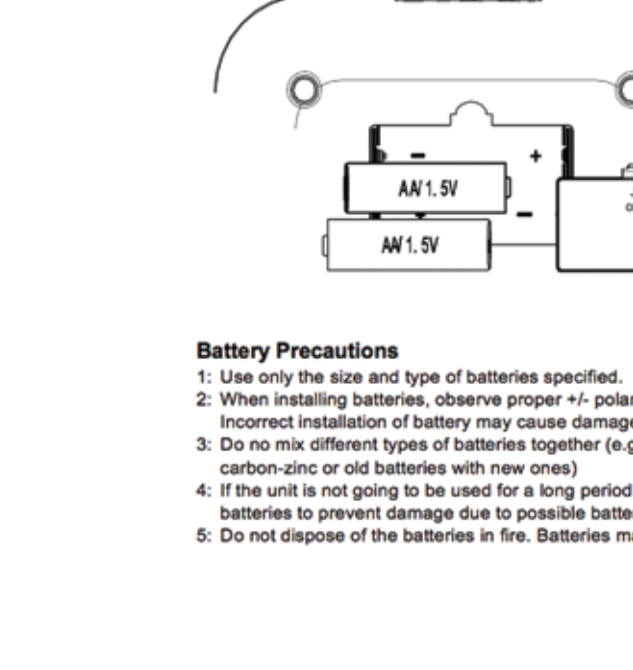 


Listening To iPhone and iPod

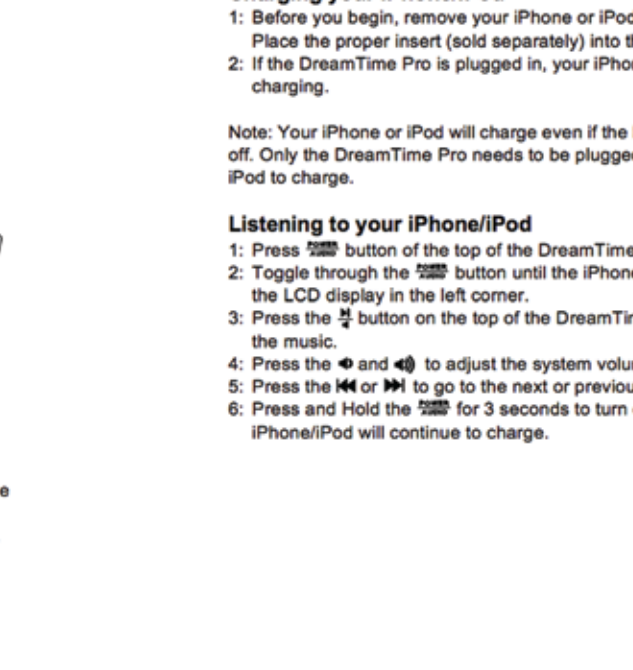 


Listening via Auxiliary

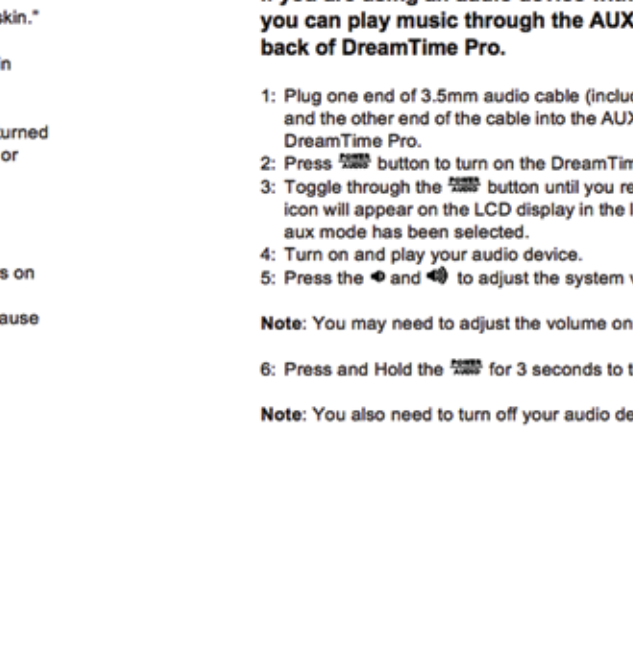 


Listening To the Radio

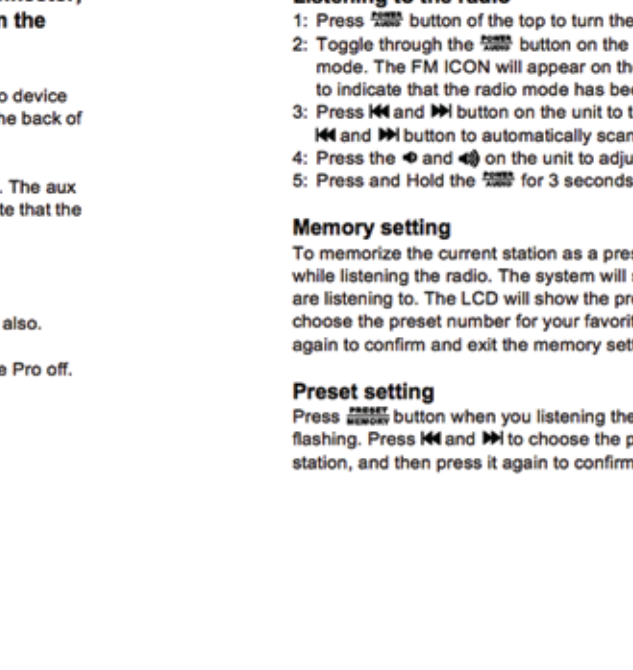 


Setting and Using Alarms

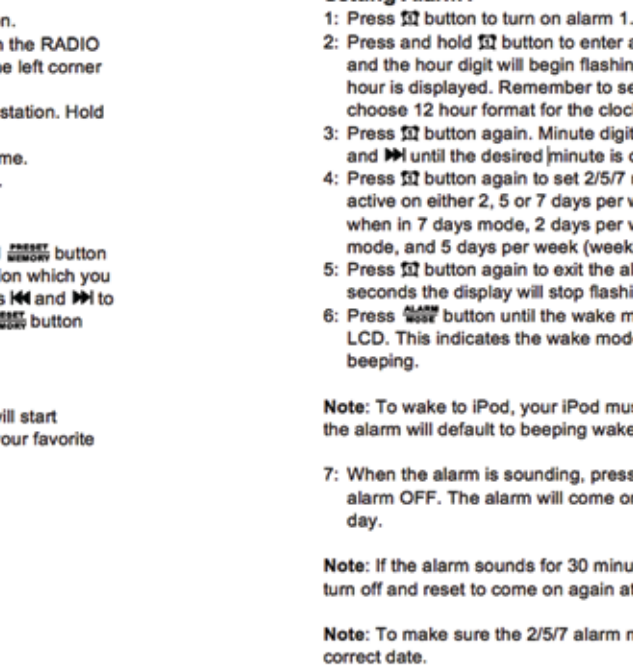 


Setting and Using The Alarms

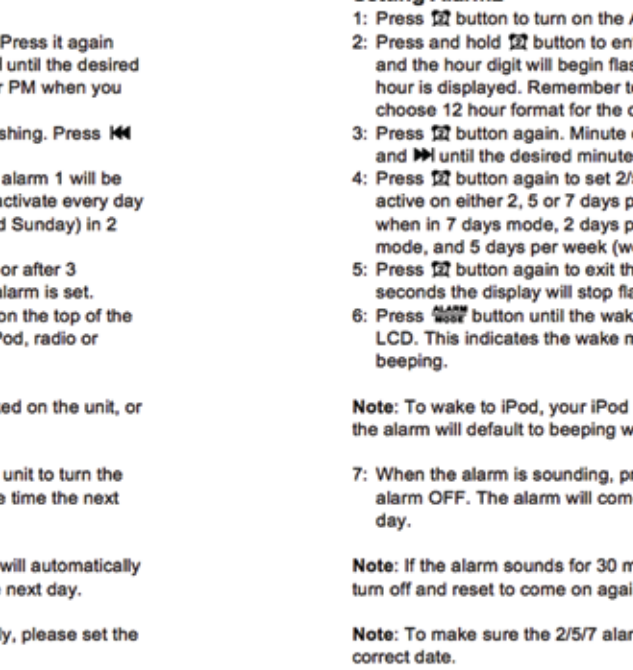 

Sleep/Nap Operation

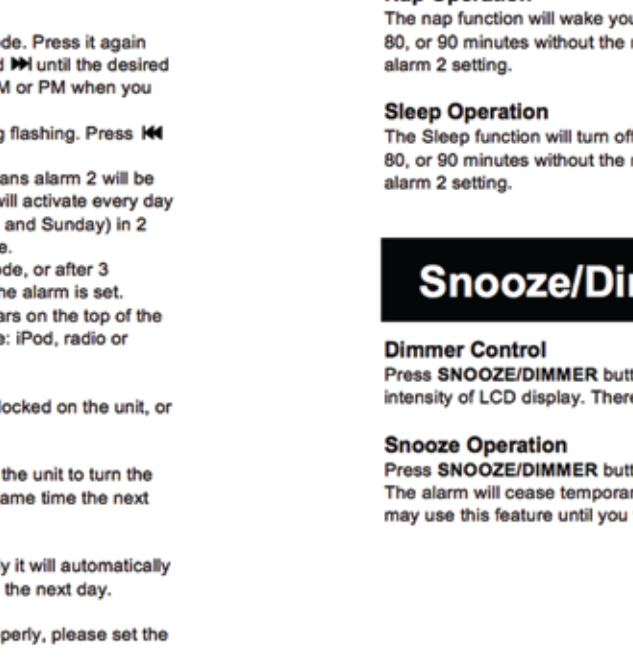 


Remote Control

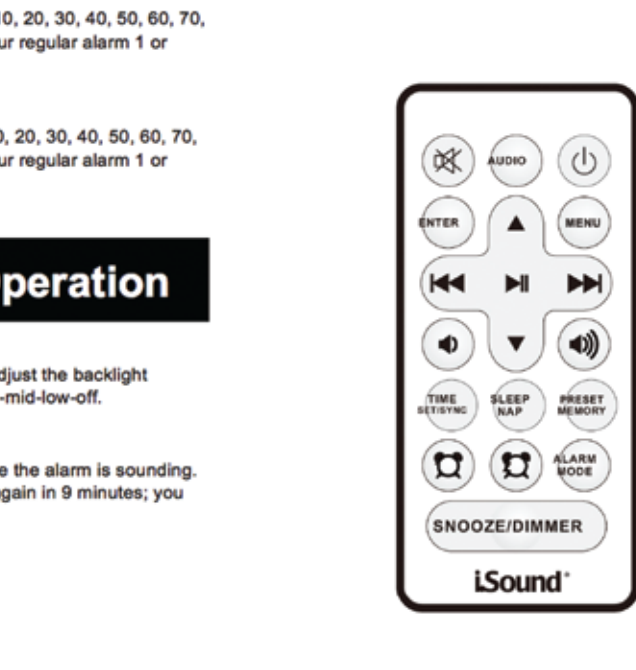 


Índice de Contenidos

Índice de Contenidos	2
Inicio rápido	3
Controles e indicadores	4
Pantalla LCD	5
Guía del consumidor	6
Características del producto	7
Ajustar la hora del reloj	8
Colocación de la pila de reserva del reloj	9
Oír su iPhone y iPod	11
Oír un dispositivo Auxiliar	11
Oír la radio	12
Ajustar y usar las alarmas	13
Retardo de alarma/Siesta	14
Mando a distancia	15

 
Inicio rápido

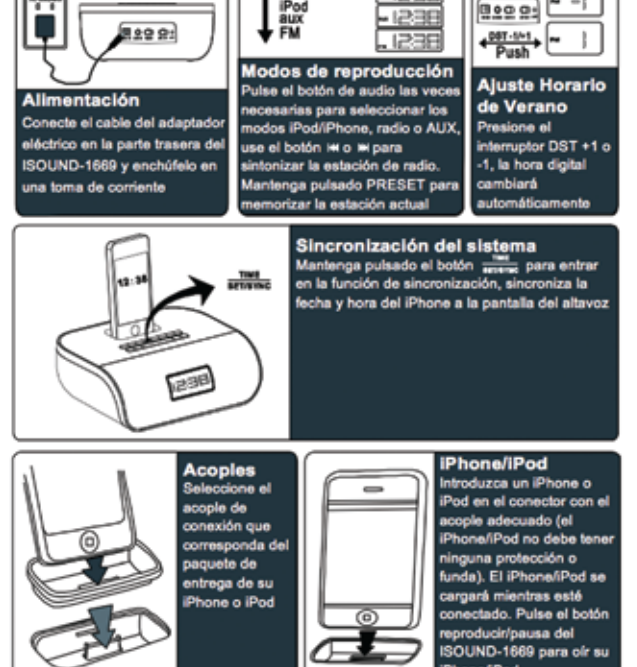


Controles e indicadores

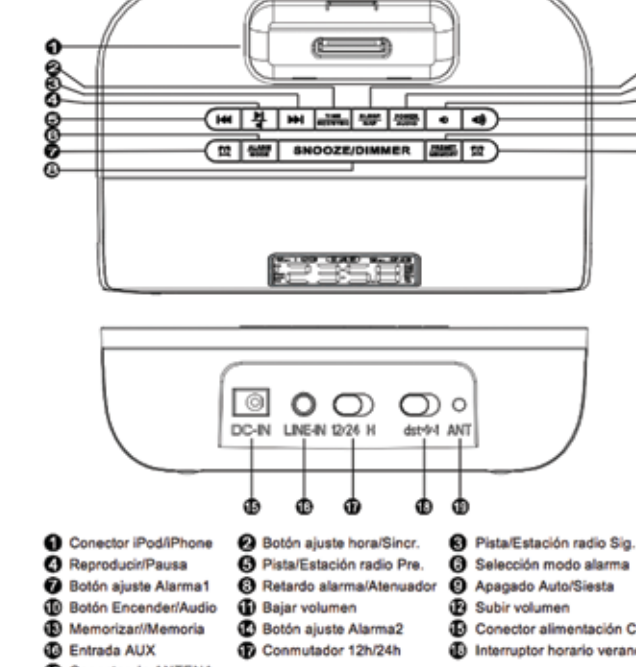 


Pantalla LCD

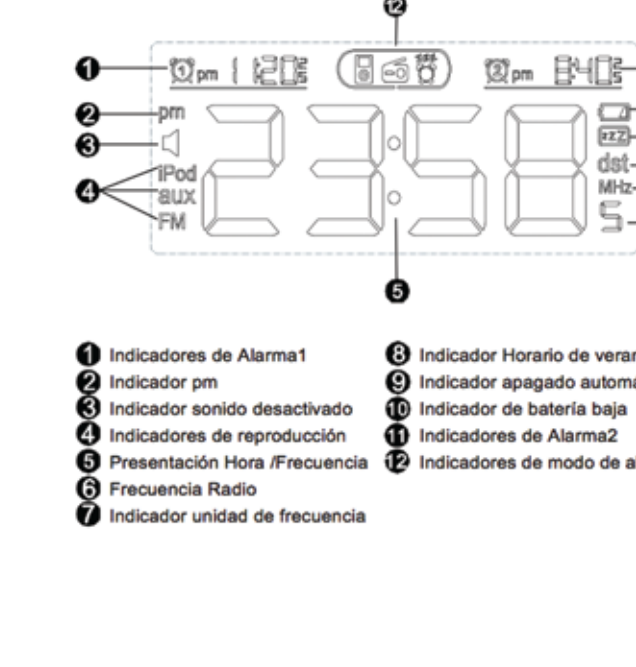 


Guía del consumidor

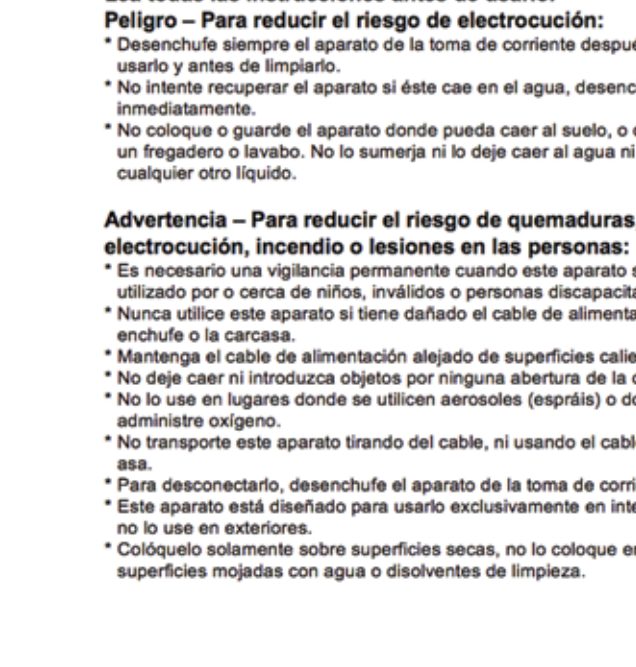 


Características del producto

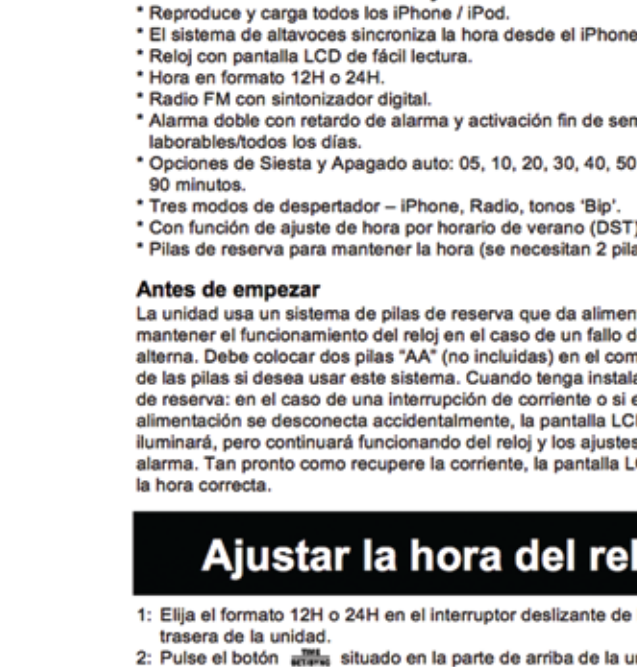 


Ajustar la hora del reloj

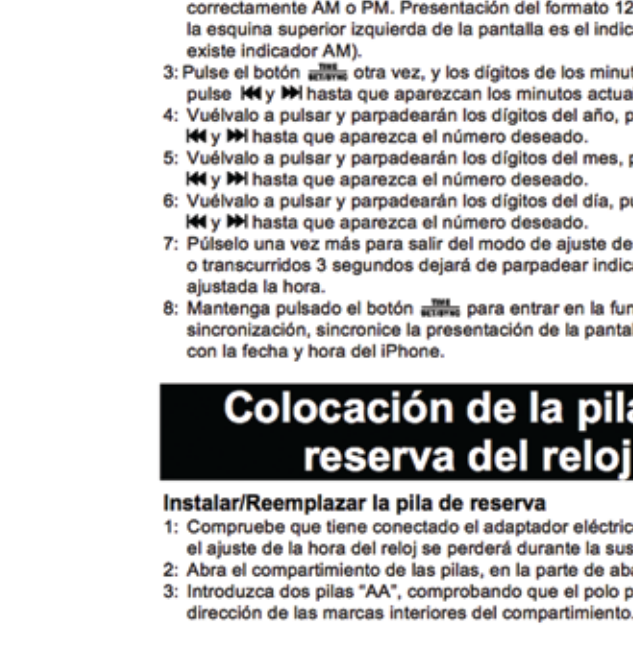 

 
Colocación de la pila de reserva del reloj

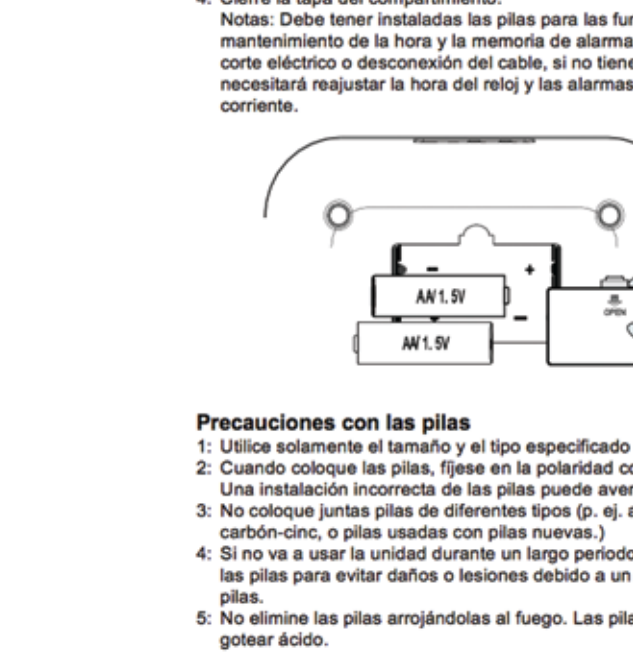


Oír su iPhone y iPod

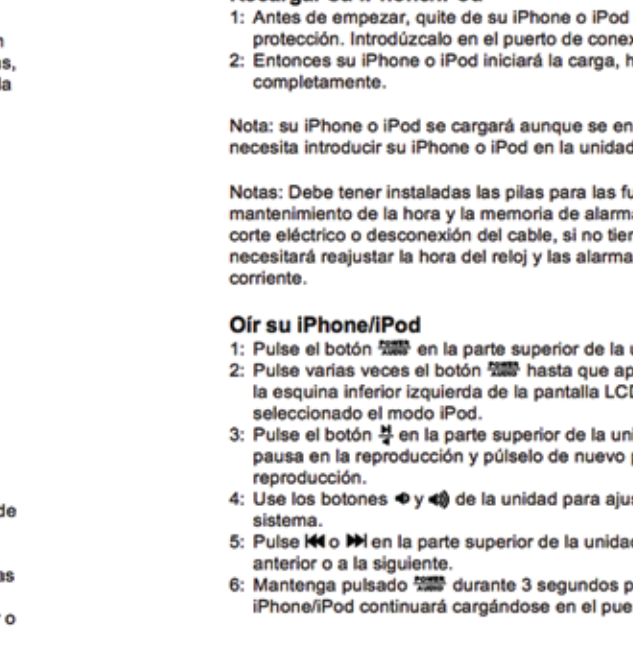 


Oír un dispositivo Auxiliar

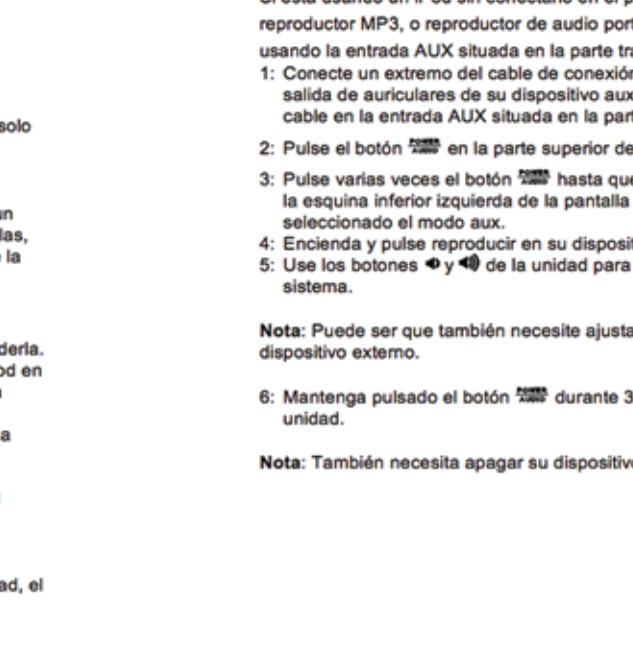 


Oír la Radio

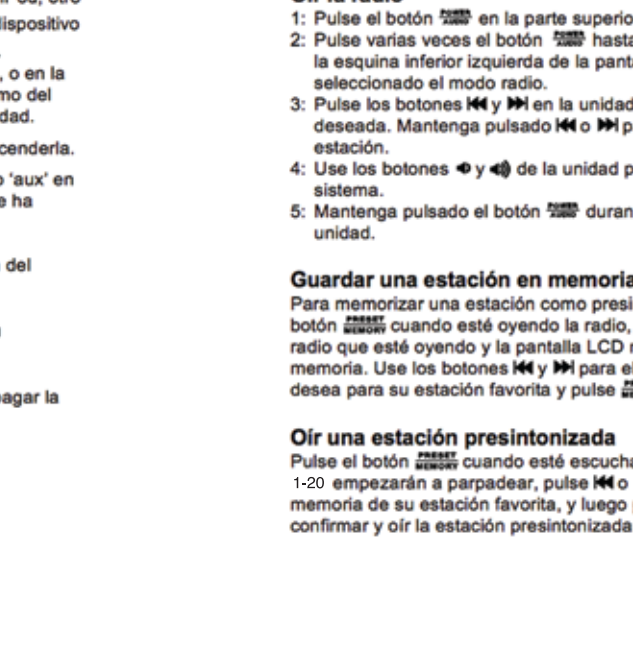 


Ajustar y usar las alarmas

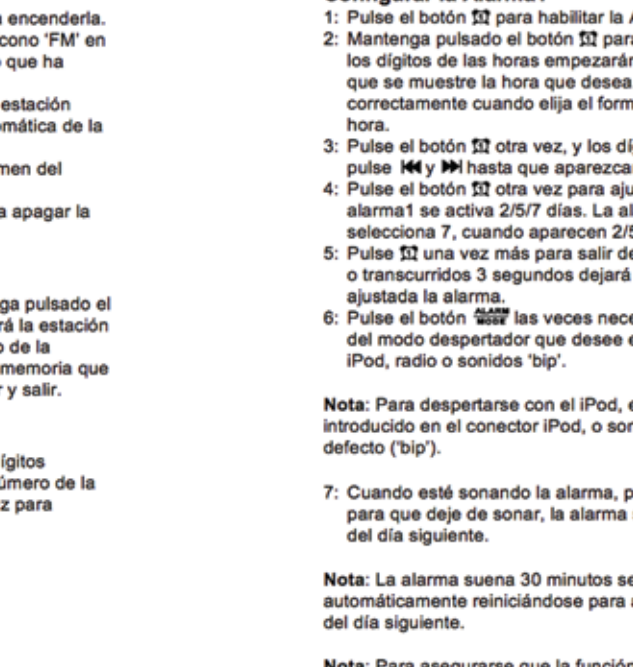 

Ajustar y usar las alarmas

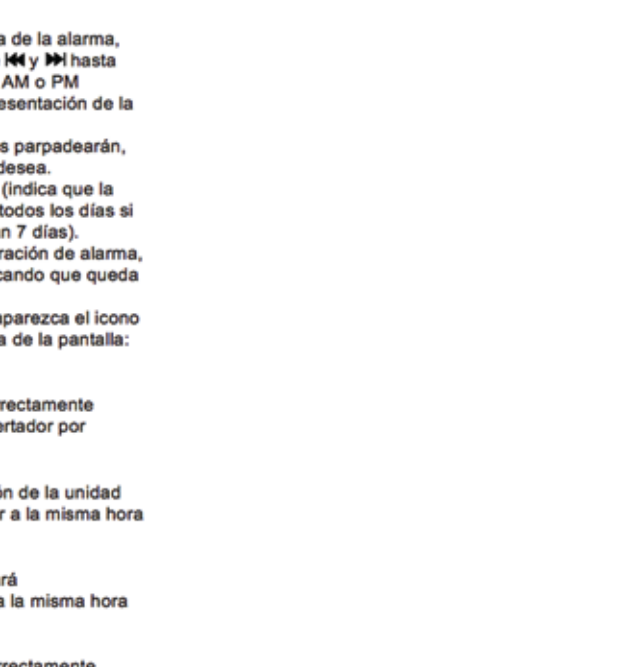 

Retardo de alarma/Siesta

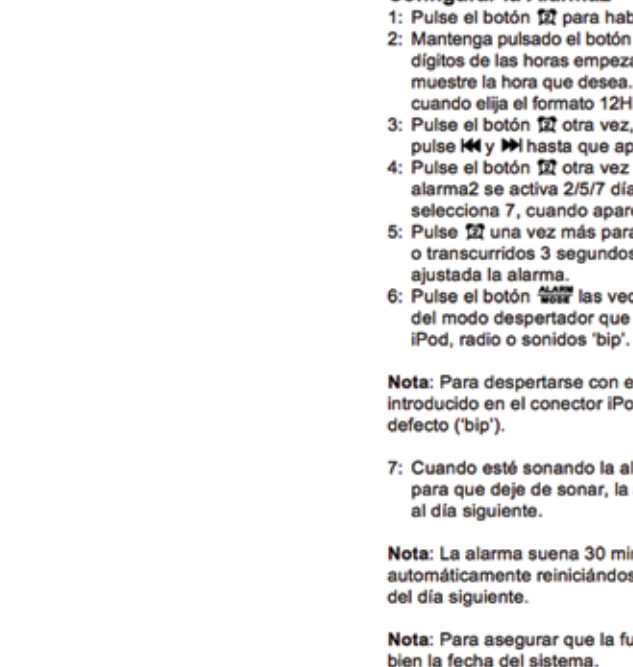 

Mando a distancia


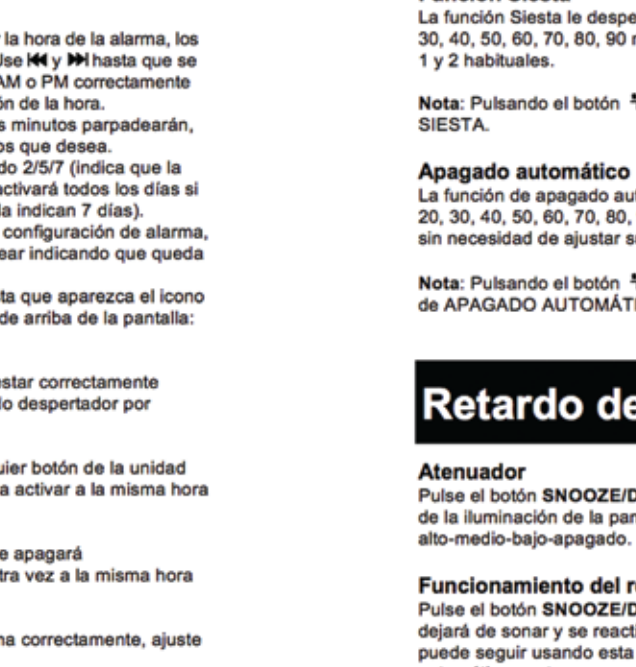 



Table des matières

Table des matières	2
Table des matières	2
Touche et boutons	3
Écran LCD	4
Guide du consommateur	6
Caractéristiques du produit	7
Régler l'heure	8
Installation des piles de secours de l'horloge	9
Écouter l'iPhone/iPod	11
Écouter la radio	12
Régler et utiliser les alarmes	13
Retard de réveil/Sieste	14
Télécommande	15

 
Démarrage rapide

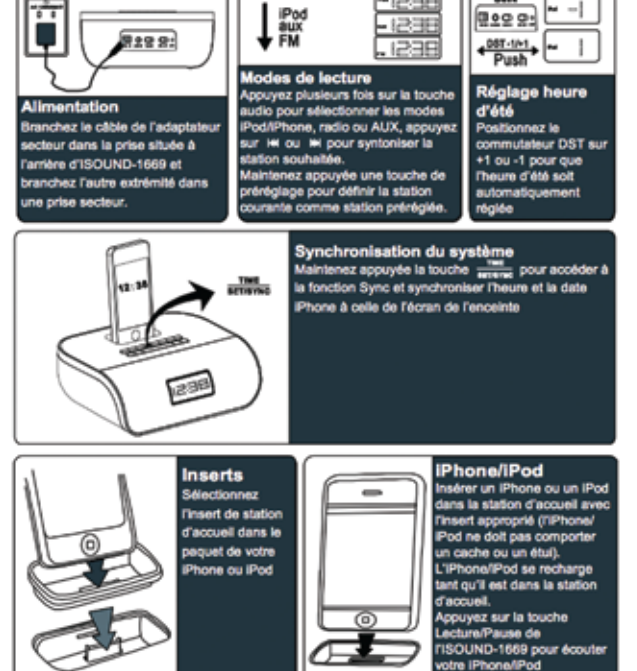


Touche et témoins

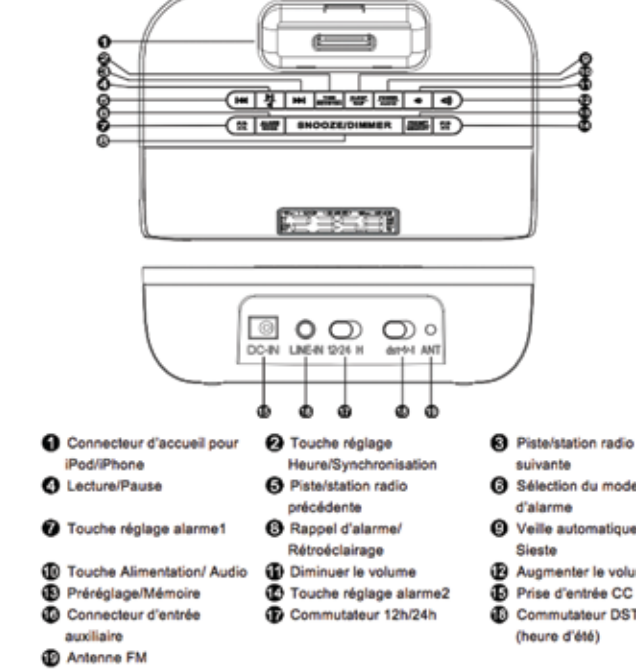 


Ecran LCD

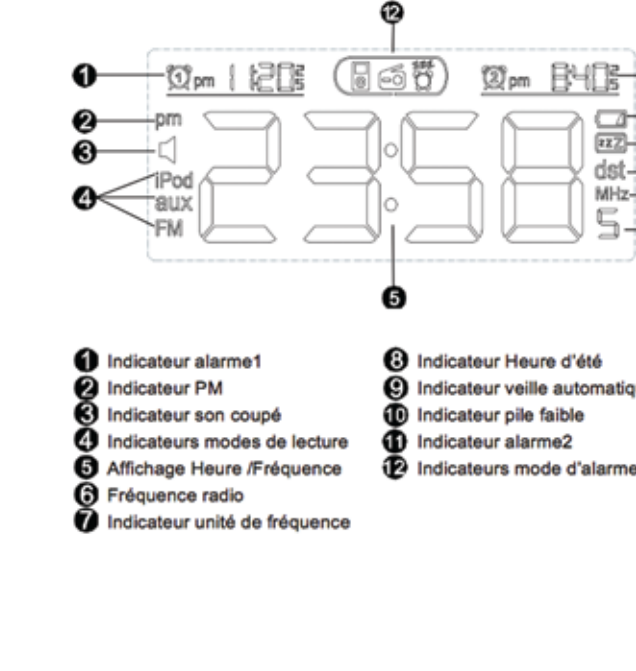 


Guide du consommateur

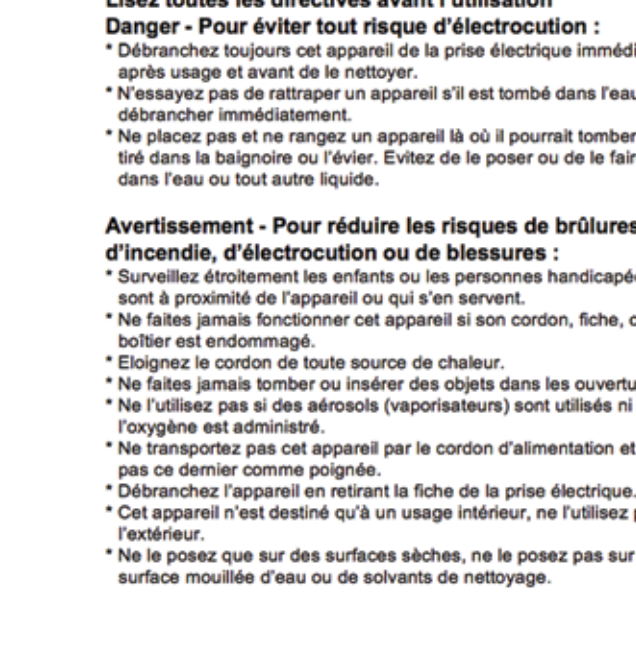 

Caractéristiques du produit

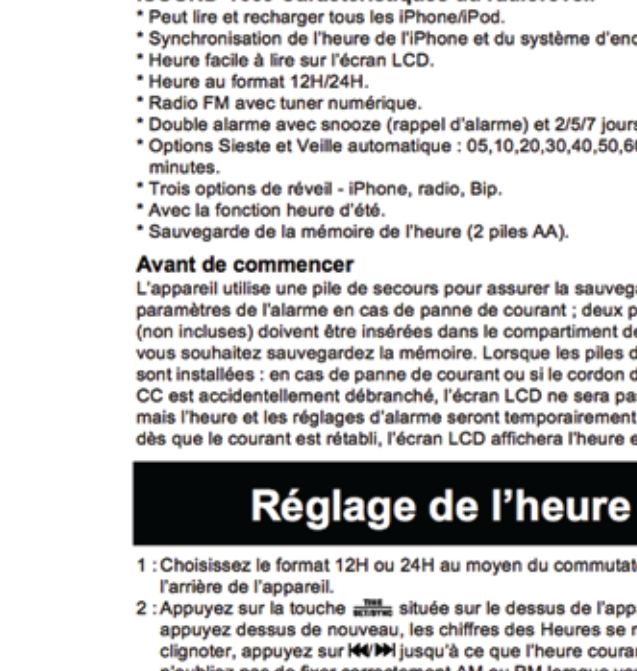 


Régler de l'heure

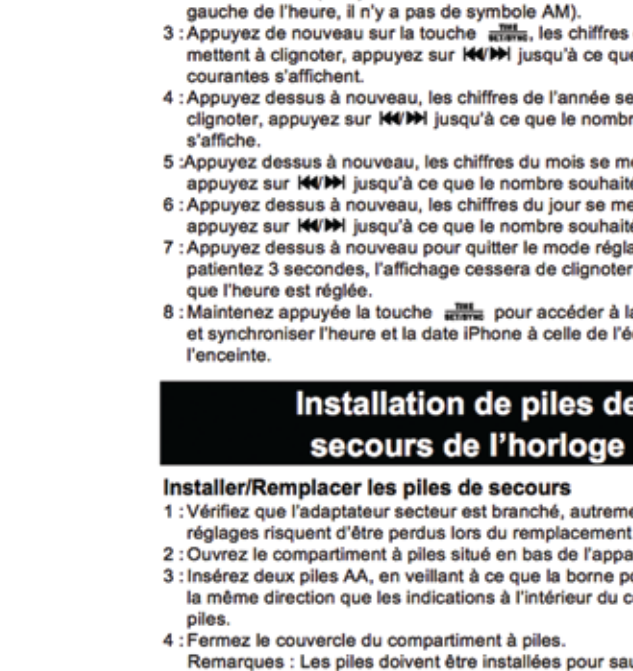 


Installation des piles de secours de l'horloge



 
Écouter l'iPhone/iPod

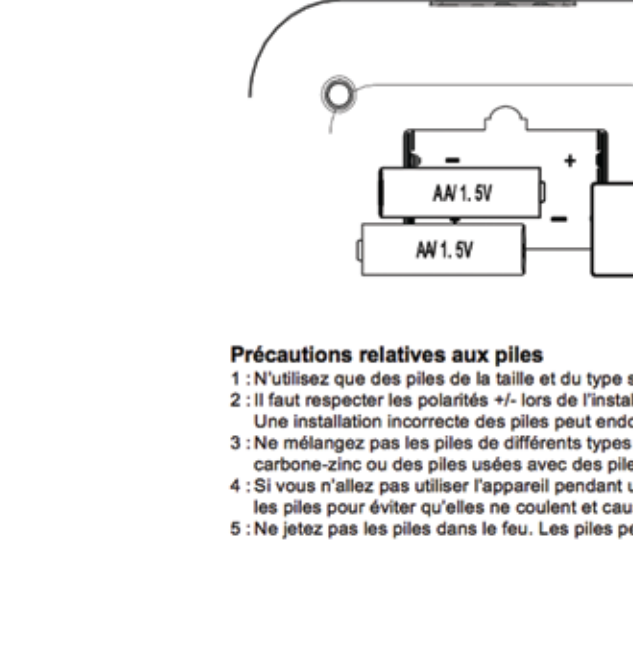


Écouter la radio

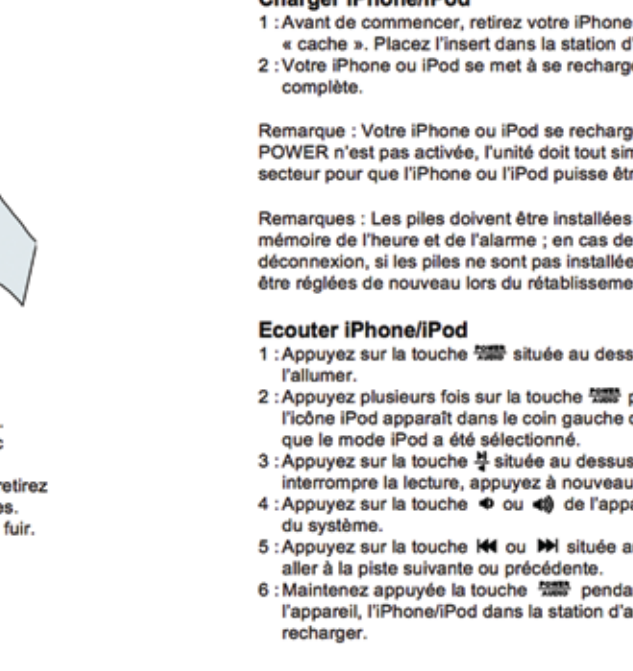 


Régler et utilisation des alarmes

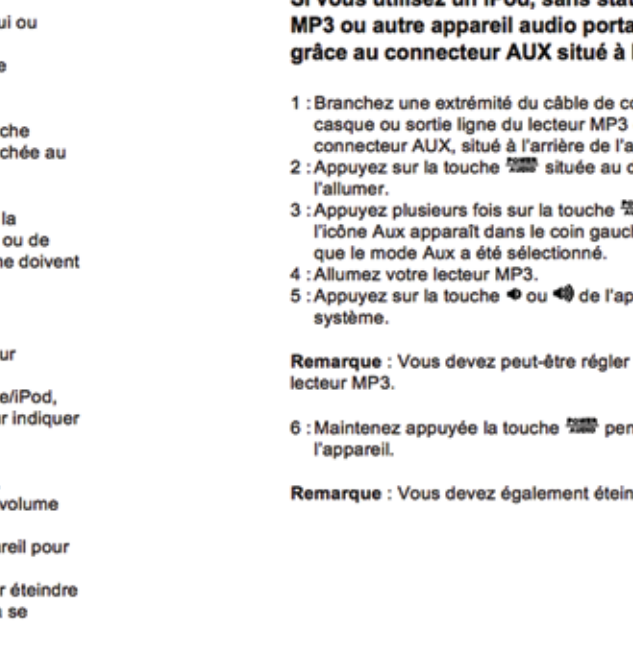 


Régler et utilisation des alarmes

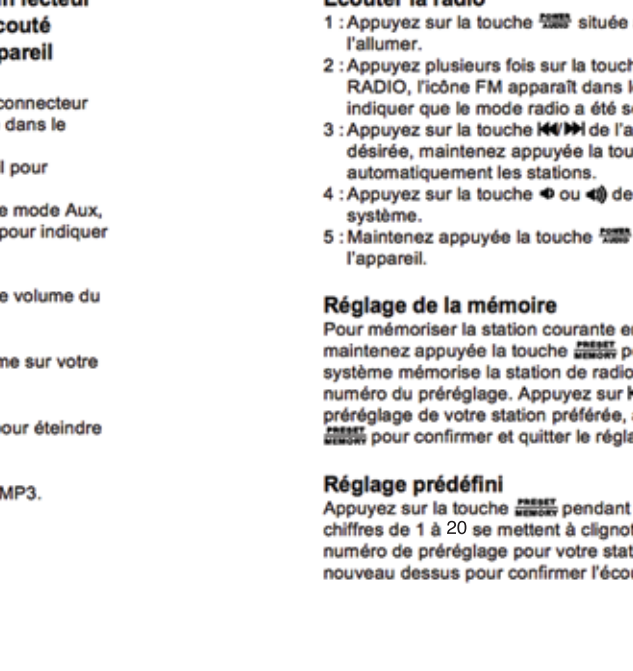 


Régler et utilisation des alarmes

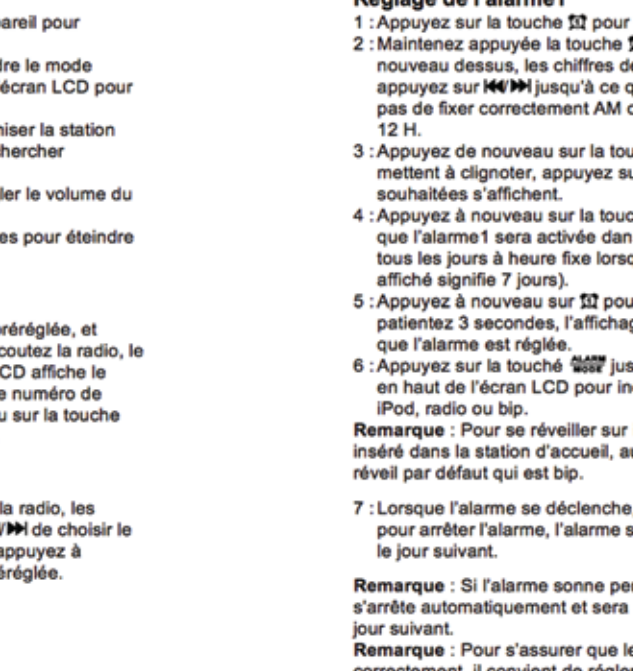 

Régler et utilisation des alarmes

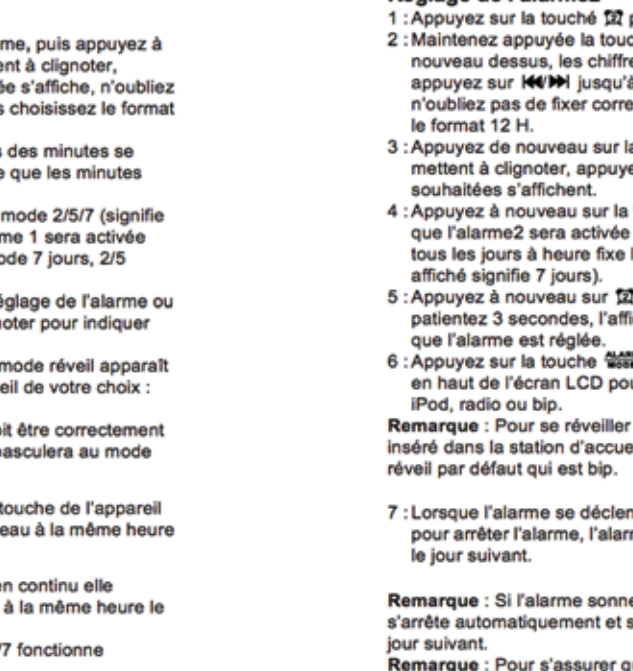 

Régler et utilisation des alarmes

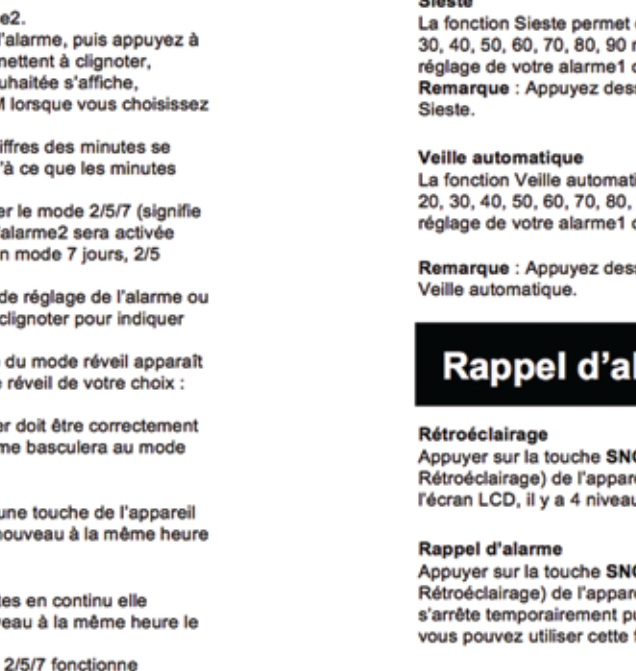 

Retard de réveil/Sieste



Télécommande

